

# RV FLANGE DRAIN ADAPTER

## QUICK INSTALLATION GUIDE

The RV Flange Drain Adapter allows for the seamless installation of the OGO™ ORIGIN, along with the Drain Kit and Riser Plate, enabling direct plumbing of liquid waste into your existing black tank.

# 1

FIRST STEP IS TO

## MAKE A PLAN

Floor Riser & Drain Kit Sold Separately



The following instructions cover the general process of removing your existing RV toilet. Since models may vary, refer to your RV's owner's manual for specific removal guidelines.

### YOU WILL NEED:

- Wrench (remove existing toilet)
- Waterline caps (if applicable)
- Phillips Screw Driver
- PVC Glue (optional)
- Rubber Gloves

# 2


## PREPARE YOUR SPACE

Before removing your RV toilet, first, shut off the water supply and **cap the water line** to prevent leaks. You can use a threaded cap or a plug, depending on your RV's plumbing setup.



# 3 EMPTY THE **BLACK TANK**

Since the toilet is sealed to your black tank, empty and thoroughly rinse the tank beforehand. Use a tank flush system or a hose with a black tank cleaning wand to remove buildup and odors. This step is crucial, as removing the toilet will break the seal, exposing you to strong odors from the tank. Proper ventilation and wearing gloves are also recommended.

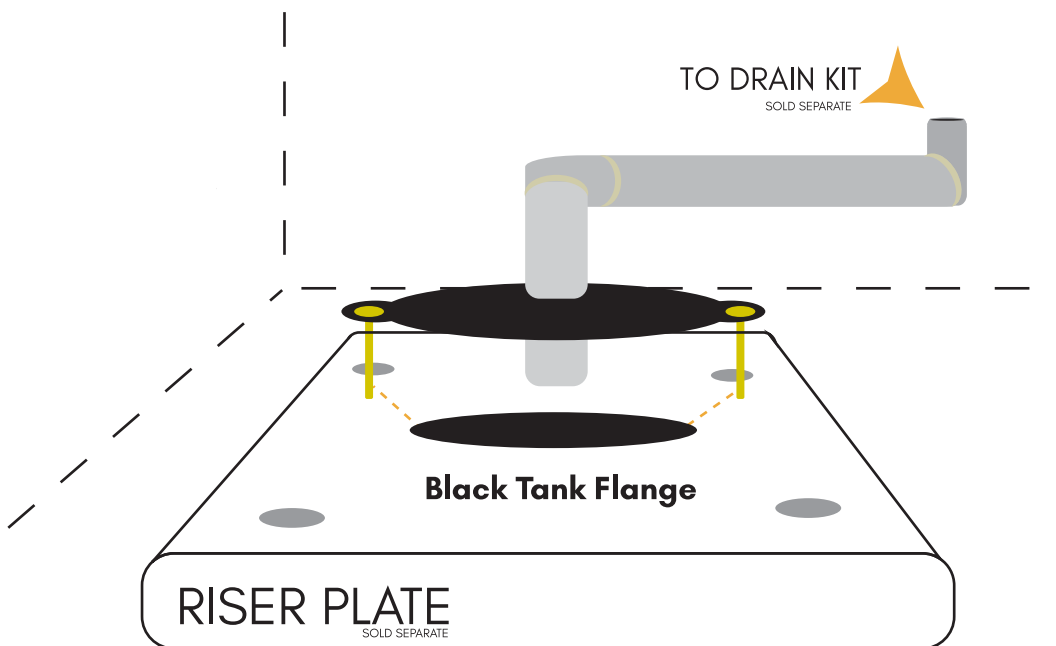

## **ADAPT TO FIT YOUR LIFE**

The RV Flange Drain Adapter seamlessly integrates components, allowing your waste system to adapt to your lifestyle with ease and efficiency.

Visit [OGOTOILET.COM](http://OGOTOILET.COM)

